 


DAEMA

USER MANUAL

MODEL: DWF-9001Q
DWF-1401Q
DWF-1801Q
DWF-2001Q

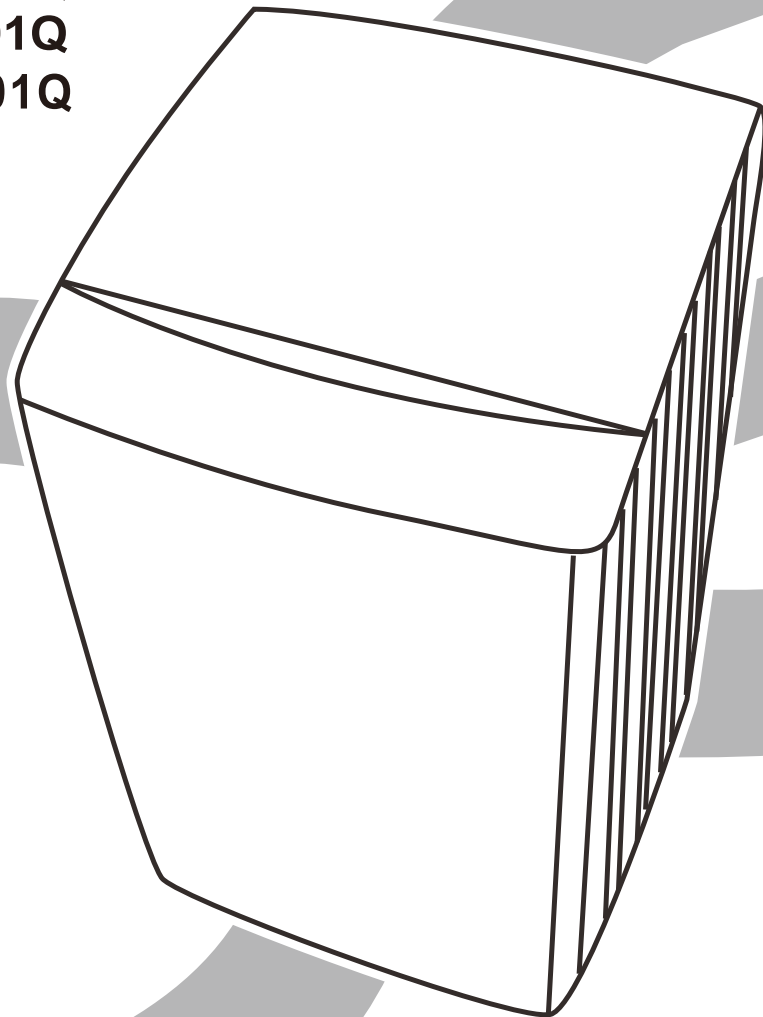



WASHING MACHINE

BY
DAEWOO ELECTRONICS
SALES & SERVICES (M) SDN BHD


CONTENTS

TITLES	PAGE
1.GENERAL SAFETY PRECAUTIONS	1-2
2.PART IDENTIFICATION	3-5
3.SPECIFICATIONS	6
4.INSTALLATION AND ADJUSTMENT	7
5.DRAIN PIPE USAGE	8
6.INSTALLATION OF THE WATER INLET	9-10
7.OPERATION INSTRUCTION	11
8.FEATURES DESCRIPTION	12
9.TROUBLE SHOOTING	13
10.CARE AND CLEANING	14

GENERAL SAFETY PRECAUTIONS

<p>Warning</p> 	<p>This mark means “danger” The content is related to safety of user and washing machine. Please operate according to the instructions or it may lead to damage.</p>
<p>No Permission</p> 	<p>This mark means no permission, or it will lead to washing machine damage.</p>

 Ensure the earth connection in your electrical supply is proper before connecting the power cord. The socket should be standard and independent of 3 pin BS plug of 220V AC, 50Hz. A connection with separate line fuse or circuit breaker of the value pf6A/16A*

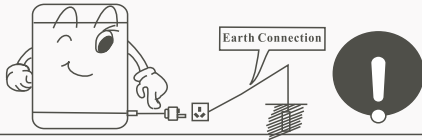


Pull out plug and turn off water tap when there is no power supply.



Do not bend/twist the electrical cord too much. Please contact our after sales service department when line or socket is damaged or slacked.



 
Do not install the machine in damp surrounding such as bathroom. Never rinse or wash the machine; Never put the wet clothes on control panel.

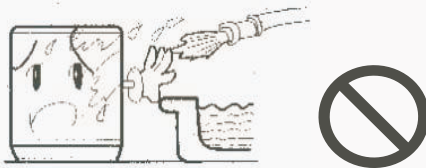

Do not use hot water more than 65°C .



 Do not block up vent when you install the washer on carpet floor.

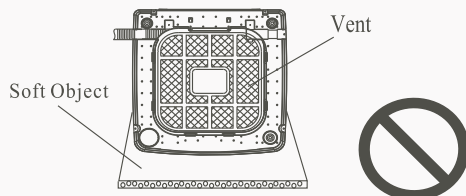









Do not wash raincoats, bicycle covers, etc.; to prevent severe vibration.



    
Do not use extension junction box since it may not be properly earthed; Do not use an extension cord.



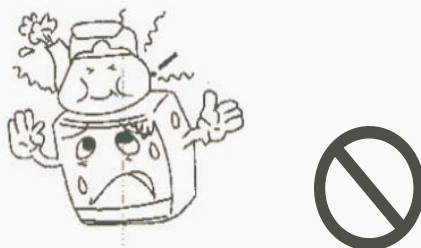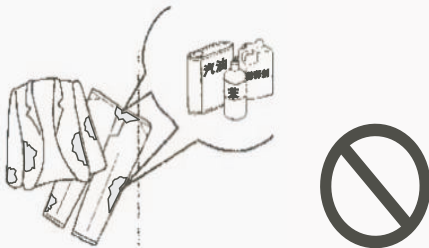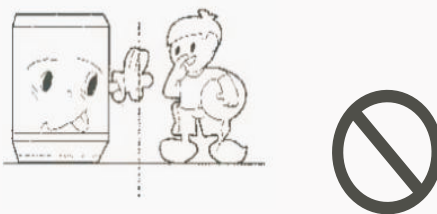
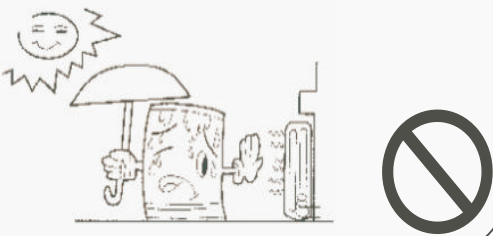


GENERAL SAFETY PRECAUTIONS

<p>Never open the wash lid or put your hand in washer tub when washing or spinning process is going on.</p> 	<p>Do not dismantle or repair the washer by yourself.</p> 
<p>Do not put any hot or heavy objects on the washer!</p> 	<p>Do not wash clothes with volatile material such as alkaline or petrol.</p> 
<p>Do not permit children to go near the machine</p> 	<p>Do not expose the machine to direct sunlight, rain or heat.</p> 
<ol style="list-style-type: none"> 1. Please clean the magic filter after every 5 wash cycles. 2. Ensure that the plug is disconnected to wall socket before taking out the filter. 3. Drain off all water in the tub. 4. Pull the filter out and wash it as shown in the picture. 5. Assemble the filter again after cleaning it. 	<p>Please ensure that you empty all pockets of objects such as coins, pens, toothpicks, match sticks etc. They might get stuck inside the machine and could cause the damage to your clothes.</p>  <ul style="list-style-type: none"> • Please ensure the tap is open and water inlet is connected properly when washing. • Detergent powder with little soap is recommended. • Please check recommended wash powder quantity list for reference.

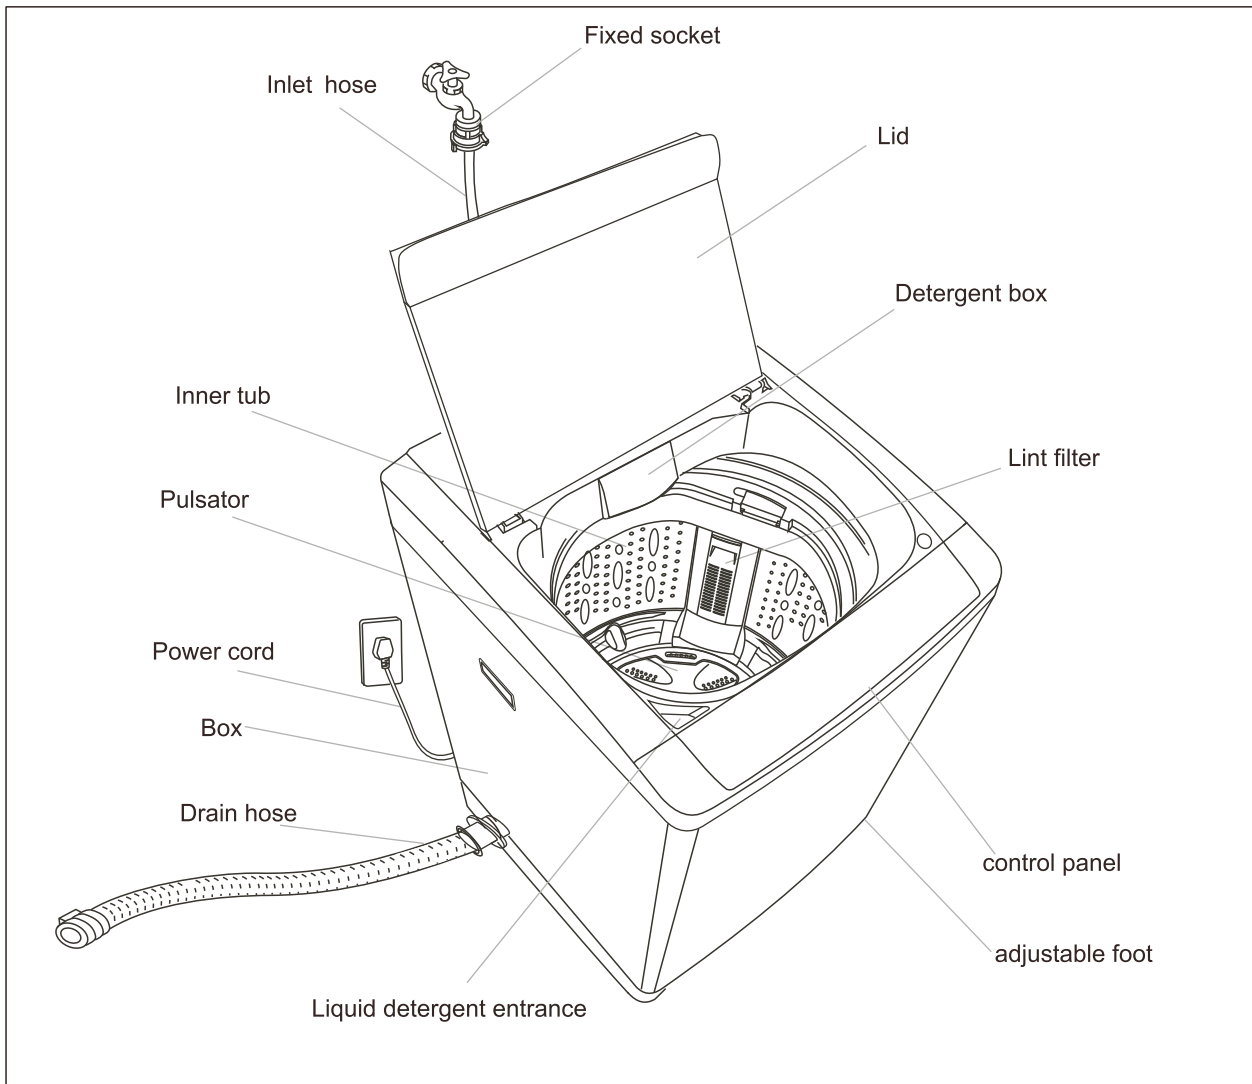 
PART IDENTIFICATION

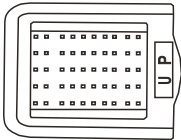  

Accessories


Inlet hose	Noise & Rat-Proof Plate	Instruction manual	Spring clamp Drain pipe
			
1PC	1PC	1PC	1PC

 Control Panel Display DWF-9001Q

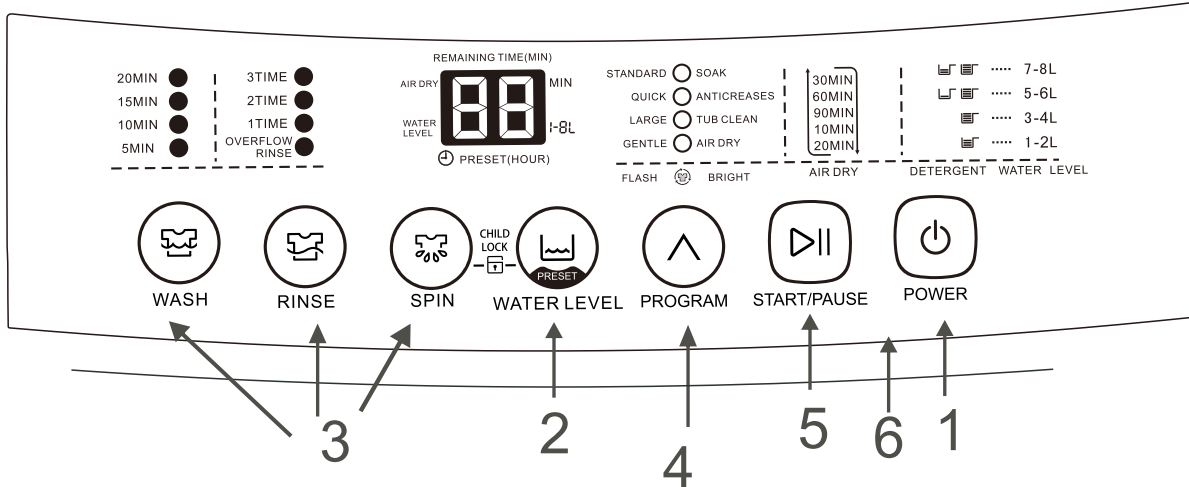

- 1 Power button**
 Press this button to turn on/off the washing machine. Do not turn on the washing machine again until 3 minutes later after it is turned off. The washing machine will turn off at once automatically when the program finished, and it will turn off automatically if you do not press the start button to start the machine within 10 minutes after press the power button to turn on the machine.
- 2 Water level button**
 Press this button to select water level.
- 3 Process button**
 Press this buttons to select the process you need.
- 4 Program button**
 Press this buttons to select the program you need.
- 5 Start/pause button**
 Press this button to start/pause the washing machine.

 Control Panel Display DWF-1801Q & DWF-1401Q & DWF-2001Q

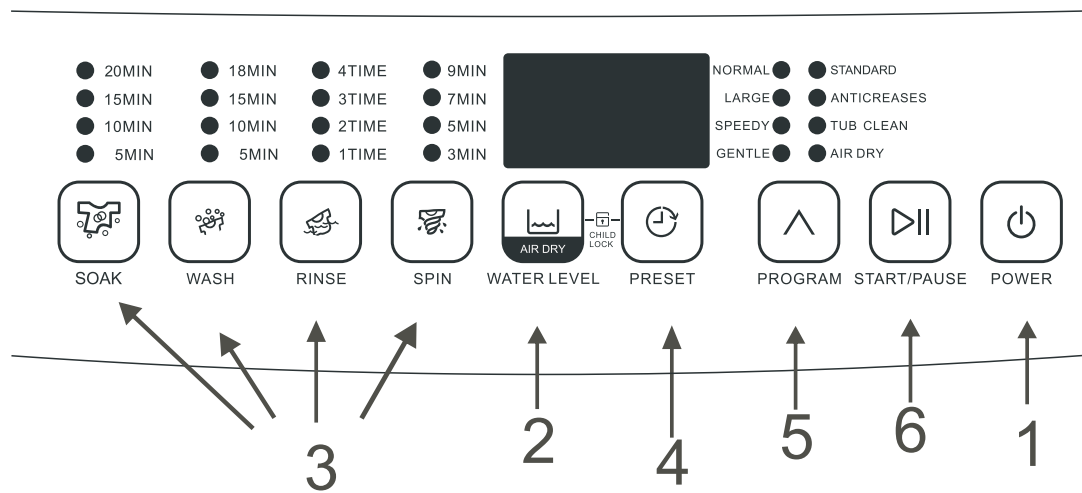

1 Power button

Press this button to turn on/off the washing machine. Do not turn on the washing machine again until 3 minutes later after it is turned off. The washing machine will turn off at once automatically when the program finished, and it will turn off automatically if you do not press the start button to start the machine within 10 minutes after press the power button to turn on the machine.

2 Water level button/Air dry

Press this button to select water level.

3 Process button

Press this buttons to select the process you need.

4 Delay start (preset) button

Hold the water level of key, then press water supply can be set up into the reservation statustime of delay start.

5 Program button


Press this buttons to select the program you need.

6 Start/pause button


Press this button to start/pause the washing machine.

SPECIFICATIONS


Model	DWF-9001Q	DWF-1401Q	DWF-1801Q	DWF-2001Q
Power	220-240V~/50Hz	220-240V~/50Hz	220-240V~/50Hz	220-240V~/50Hz
Wash/ Spin Capacity	9kg	14kg	18kg	20kg
Input Power (W)	420W	450W	500W	500W
Inlet Water Pressure	0.03Mpa~0.85MPa	0.03Mpa~0.85MPa	0.03Mpa~0.85MPa	0.03Mpa~0.85MPa
Water Proof Level	IPX4	IPX4	IPX4	IPX4
Set Dimensions(mm)	575x575x965	605x640x995	685x700x1070	685x700x1100
NW	32kg	44kg	54kg	63kg
Noise	Wash Noise: ≤60dB Spin Noise: ≤70dB	Wash Noise: ≤60dB Spin Noise: ≤70dB	Wash Noise: ≤60dB Spin Noise: ≤70dB	Wash Noise: ≤60dB Spin Noise: ≤70dB

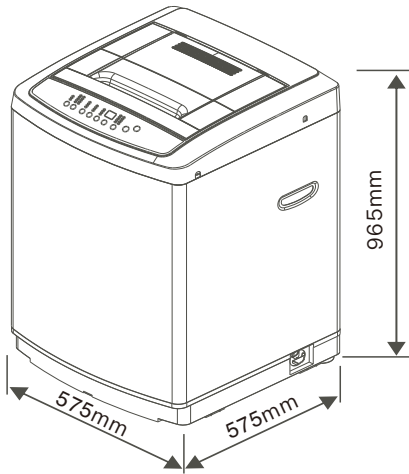 


DWF-9001Q

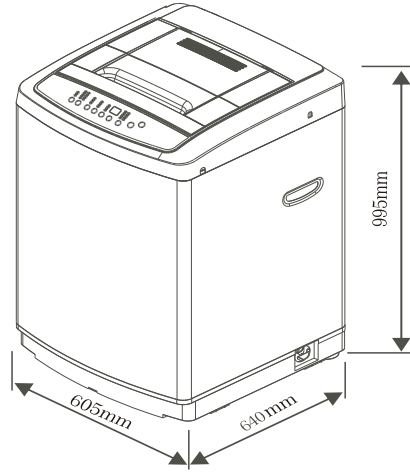 

DWF-1401Q

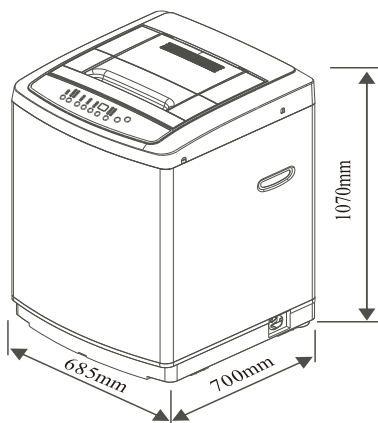 



DWF-1801Q

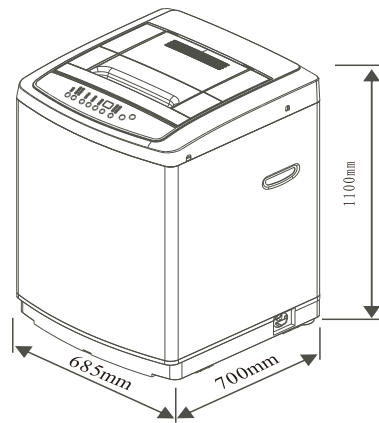 


DWF-2001Q

INSTALLATION AND ADJUSTMENT

  
- Do not place the washing machine on a slanting, uneven or unstable surface.
- Place the washing machine on a solid levelled surface to avoid excessive vibration during operation.

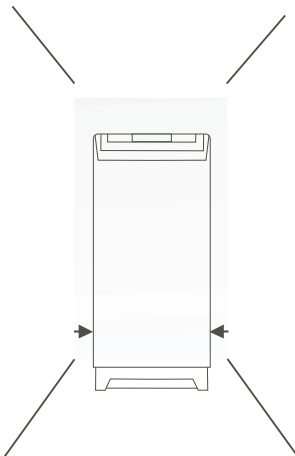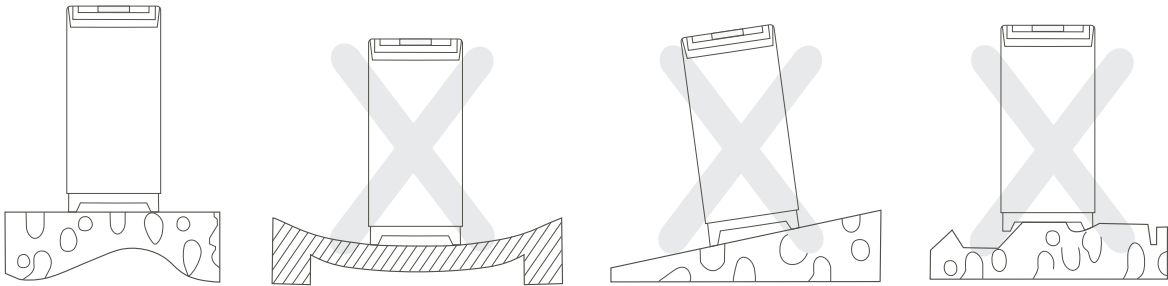

 Keep the machine at least 10cm away from the wall on all sides.

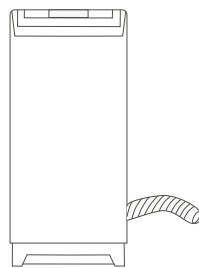

 Place the drain hose flat on the floor before operating the machine.

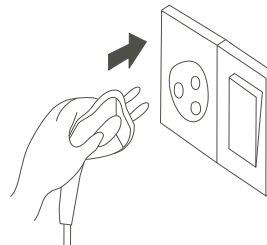

Washing machine should be directly connected to socket. Switch off the machine when not in operation

- If the power cord is damaged, it must be replaced by the authorized service person in order to avoid hazard.
- Discard the cushion balance ring assy cover.
- Remove transit bracket.

Dismantling the package

 
 
 
- Dismantle the package and take out the rat mesh package with upper foam.
- Open the wash lid and take out all the accessories.
- Remove all packaged items including convex plastic cube.

Adjusting The Washing Machine


- The front legs of the machine are adjustable. Lift the front side slightly and rotate the legs to let the machine stable and horizontal.
- Then lock the nut if the legs has nut.
- Please check whether the machine is horizontal as shown in picture.

DRAIN PIPE USAGE

Change the direction of the drain hose

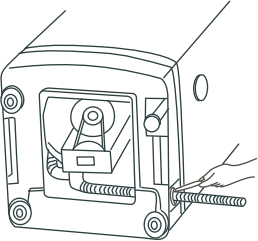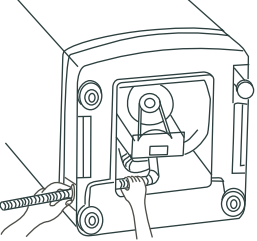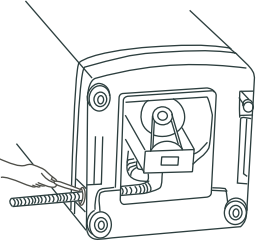
<p>Unfasten the fixed screw of the drain hose joint.</p> 	<p>Lead out the drain hose from the opening to the other side.</p> 	<p>Fasten up the screw to fix the drain hose.</p> 
--	--	--

 Extension of the drain hose(down drain)

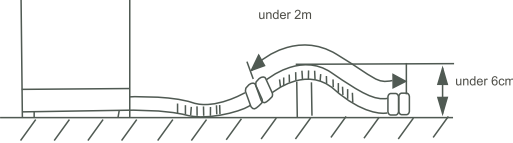Extension of the drain hose	Extension of the height	Extension of the length	
step in the center	under 6cm	under 1m	
no step in the center	—	under 1m	


INSTALLATION OF THE WATER INLET

 Proper water inlet

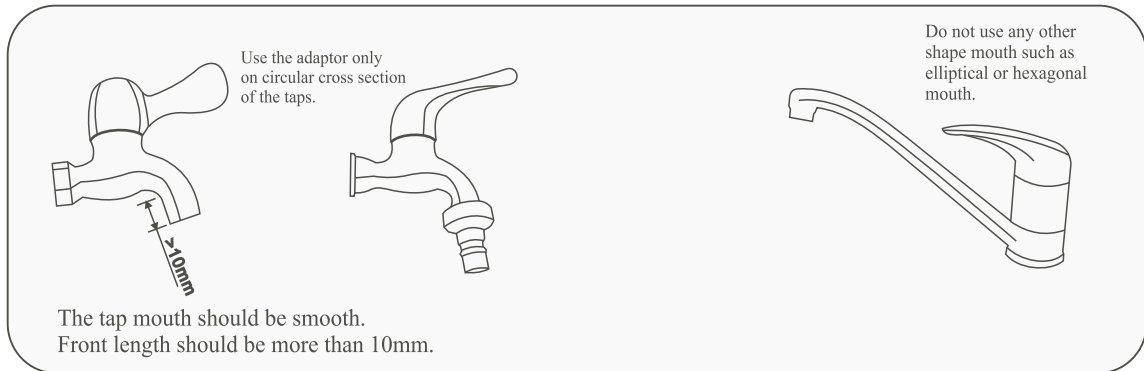


Connect the adaptor to the tap

 1. Detach the adaptor from the water inlet pipe accessories as picture 1: Hold the bottom part of locking lever and press down the slider;
2. Loosen the four screws of the tap adaptor and press the tap adaptor against the mouth of the water tap as shown in Picture 2 (Detach the ring if it is smaller than the tap mouth as Picture 3).

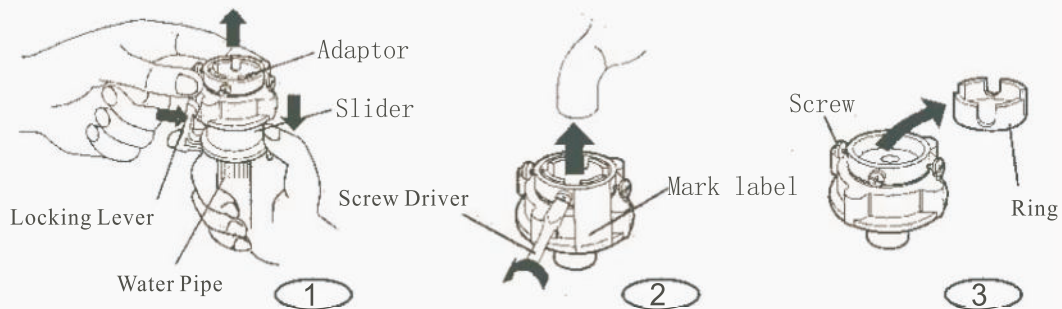

 
3. Tighten the screws evenly as shown in picture 4.
4. Remove the mark, rotate the nut in counter clockwise direction.

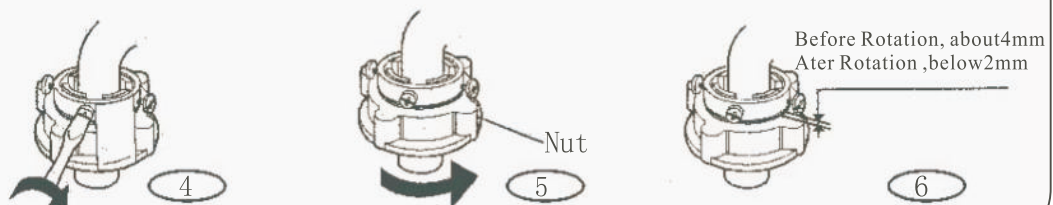

INSTALLATION OF THE WATER INLET


Connect the inlet water pipe to the machine

 1. Do not detach the water proof ring. Please check whether the ring is damaged before the wash.
2. Cover the pipe nut on the water valve.
3. Fit the nut tightly.

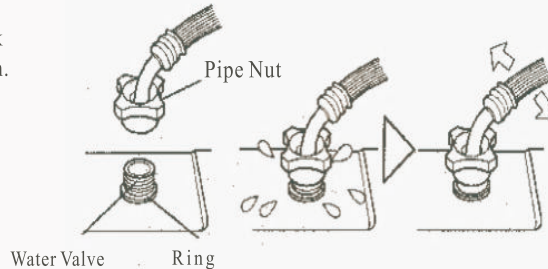


Connect the inlet water pipe to the adaptor

 1. Press Down the slider, insert the pipe to the adaptor.
2. Let the locking lever hook the pipe connector, release the slider until you hear a sound.

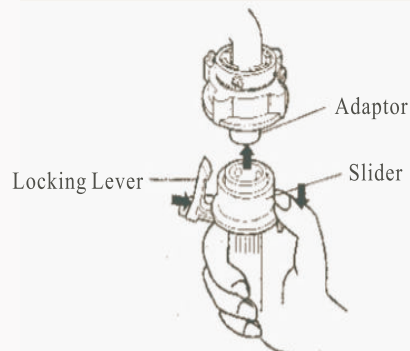


Check the water inlet pipe and the tap

 1. Pull the pipe gently to check whether it is tight.
2. Open the tap to check leakage.
3. Ensure the pipe is connected to the tap and the machine properly before each wash.

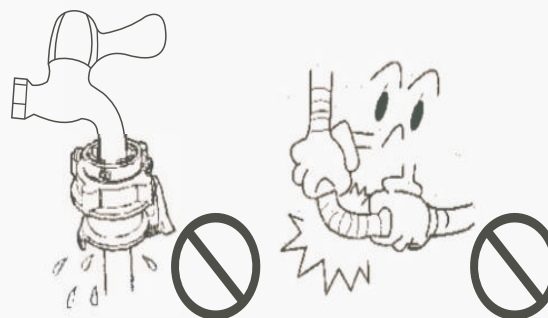

Detach the inlet water pipe

 1. Close the water tap.
2. Hold the locking lever and press down the slider, then take down the pipe.

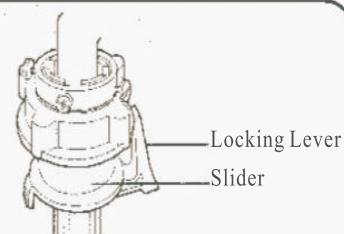


OPERATION INSTRUCTION

1. Press the "POWER" button to turn on the machine.



 2. Press the "PROGRAM" button to choose the program you want.



DWF-1801Q
DWF-1401Q



DWF-9001Q

Noted: If users want to change the settled program, press "POWER" or "START/PAUSE" button to stop the machine first, then press "PROGRAM" button to choose programs.

3. Press the "WATER LEVEL" button to choose the water level you want, and put detergent accordingly.



DWF-9001Q



DWF-1801Q
DWF-1401Q
DWF-2001Q

Note: The water level can be changed during working. If the users change to a higher one, the machine will stop to fill in water, and start when the water reaches to the settled one.

4. Close the wash lid.

5. Press the "START/PAUSE" button to start operating.



Noted: 1. Please make sure the highest point of clothes is below balance ring.

2. If users want to choose air function, press "PROGRAM" button to choose air dry function, then press "WATER LEVEL" button to choose time.

3. FUZZY LOGIC is an intelligent program. Press PROGRAM button to choose NORMAL function, the machine will choose the best procedure according to the wash capacity.

FEATURES DESCRIPTION

Auto Alarm

Digital Display	Problem	Tactics
E0	The wash tub is filled with water for more than 50 minutes	Open the lid
E1	Ensure the drain pipe is horizontal and the height is less than 6cm; Ensure the drain pipe is not blocked or bend	The machine automatically detects and rearranges the load if it is out of balance, this results in a better cleaning process
E2	Load imbalance	Open the lid and put the clothes evenly and symmetrically, then close the lid
E3	The lid is open	Close the lid properly
E4	The water sensor is abnormal	Contact our service department
E6	Open the lid after setting Child Lock function	Close the lid properly

1. Fuzzy Logic

The machine selects the program/process/water level/rinse cycle, etc. by itself by detecting the size, dirt and weight of clothes.

2. Memory Backup

The machine remembers wash cycle status if power cuts off during the washing process. The machine will continue the washing process once the power is back.

3. LED Display

Intelligent central digital dynamic LED display indicates the operation status vividly.

4. Delay Start

Select the delay start time from 1 Hr to 24 Hr separately, the machine will start working with the set program after the desired time.

5. Crystal Drum

The special design helps to improve the quality of wash and reduce the wear rate of clothes.

6. Tub Clean

We recommend consumers to use this function every 2 weeks to keep the machine clean.

Press Program button to select Tub Clean, then close the lid and Press Start/Pause button.

7. Air Dry

Air is supplied to the clothes during the washing and rinsing process thus keeping the clothes fresh.

8. DIY (Do It Yourself)

To automate and save a program as per your needs.

9. IMD

IMD means "In-mould decoration". This technology keeps the panel shining forever.

10. Damping Lid

The lid closes smoothly to avoid jerks.

11. Child Lock

Child Lock function can be realized when press Water Level and Reset button together during running

12. Bubble Wash

Soap bubbles are generated which then collide with the clothes giving a better soaking action.

13. Anti Creases:

After choosing this program, the machine will not drain in last cycle to prevent clothes creased. In addition, the water can be used again.

 
TROUBLE SHOOTING

Key points for trouble locating



Washing machine not running

- Is the water tap open?
- Is the power cord plugged into the socket properly?
- Is the power supply turned on?
- Is the Fuse sound?
- Is the water Level enough?

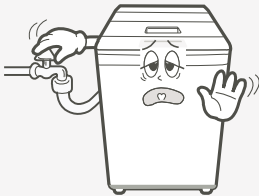


No water entering the machine

- Is the water tap open?
- Has the water supply ceased?
- Is the water inlet hose or connection pipe clogged?
- Has the water tap frozen?
- If water supply is not supplied within 50 minutes, the buzzer will give out an audible alarm.




Water is not draining out of the machine

 - Is the drain pipe let down?
- Is the drain pipe frozen?
- Is the drain pipe clogged?
- If the drain is not realized within 20 minutes, the buzzer will give out an audible alarm.

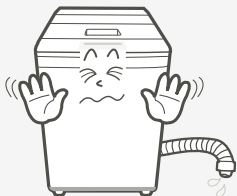


The Rinse/Spin cycle is not functioning properly.

 - Are the clothes put evenly inside the washing barrel?
- Is the washing machine positioned stable and horizontally?
- Is the top cover of the washing machine close?

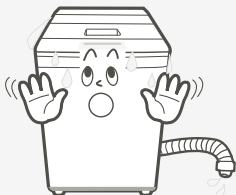

Power supply cannot be turned off

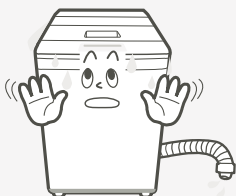 


- If the error flag is still displayed, contact commercial agent of service center.






Water is overflowing from the machine


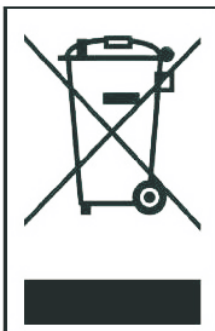 
- Drain the machine.
- If the error flag is still being displayed, contact an authorised service center.

CARE AND CLEANING

<p>Program Finish</p> <ul style="list-style-type: none"> The machine will make a buzzer sound automatically once the program finishes. 	<p>Shell Maintenance</p> <p>Wipe the machine with soft and dry cloth after each wash. Do not use soda or bleach for cleaning the washing machine.</p> 
<p>Magic Filter Clearance</p> <ul style="list-style-type: none"> Ensure the Magic Filter is assembled before washing. Clean the Magic Filter after each wash as shown in the picture. 	<p>Inlet Mouse Clearance</p> <p>Please clean the inlet filter if it is blocked.</p> 

Clean the lint filter

- Please pull out the lint filter according to the direction of arrow.
 
- Firstly, open the lint filter, and then close it after cleaning and rinsing thoroughly.
 
- Reinstall the lint filter according to the direction of arrow.
 

This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Distributed by:

Daewoo Electronics

Sales & Services (M) Sdn. Bhd
Lot 886, Bay B2-B4, Jalan Subang 9,
Taman Perindustrian Subang,
Off Jalan Puchong Hicom,
47500 Subang Jaya, Selangor.